

D230

Specifications

[Consort D230](#)

Requirements

- The system needs to be connected to a computer with a true **RS232** serial port. It does not function correctly with converters to USB or to Ethernet. When required to obtain a serial port card, check that it is based upon UART chips such as 16550, 16650, 16750 or 16950.
- Use the RS232 **cable** that was supplied with the system. When required to obtain a new one, check it is a 'straight forwarded' type. Do not use null-modem cables.
- The software runs under **Windows** but has not been completely tested for Windows 8. Under Windows 7 needs to the compatibility to be set to 'Win XP SP3'.

Software

[D230](#)

From:
<http://www.consort.be/wiki/> - **Support website**

Permanent link:
<http://www.consort.be/wiki/d230info?rev=1422609217>

Last update: **30/01/2015 09:13**

